


BOSCH

January 2000
INDUSTRIAL

"BRUTE" HAMMER
Model 0611304034

11304

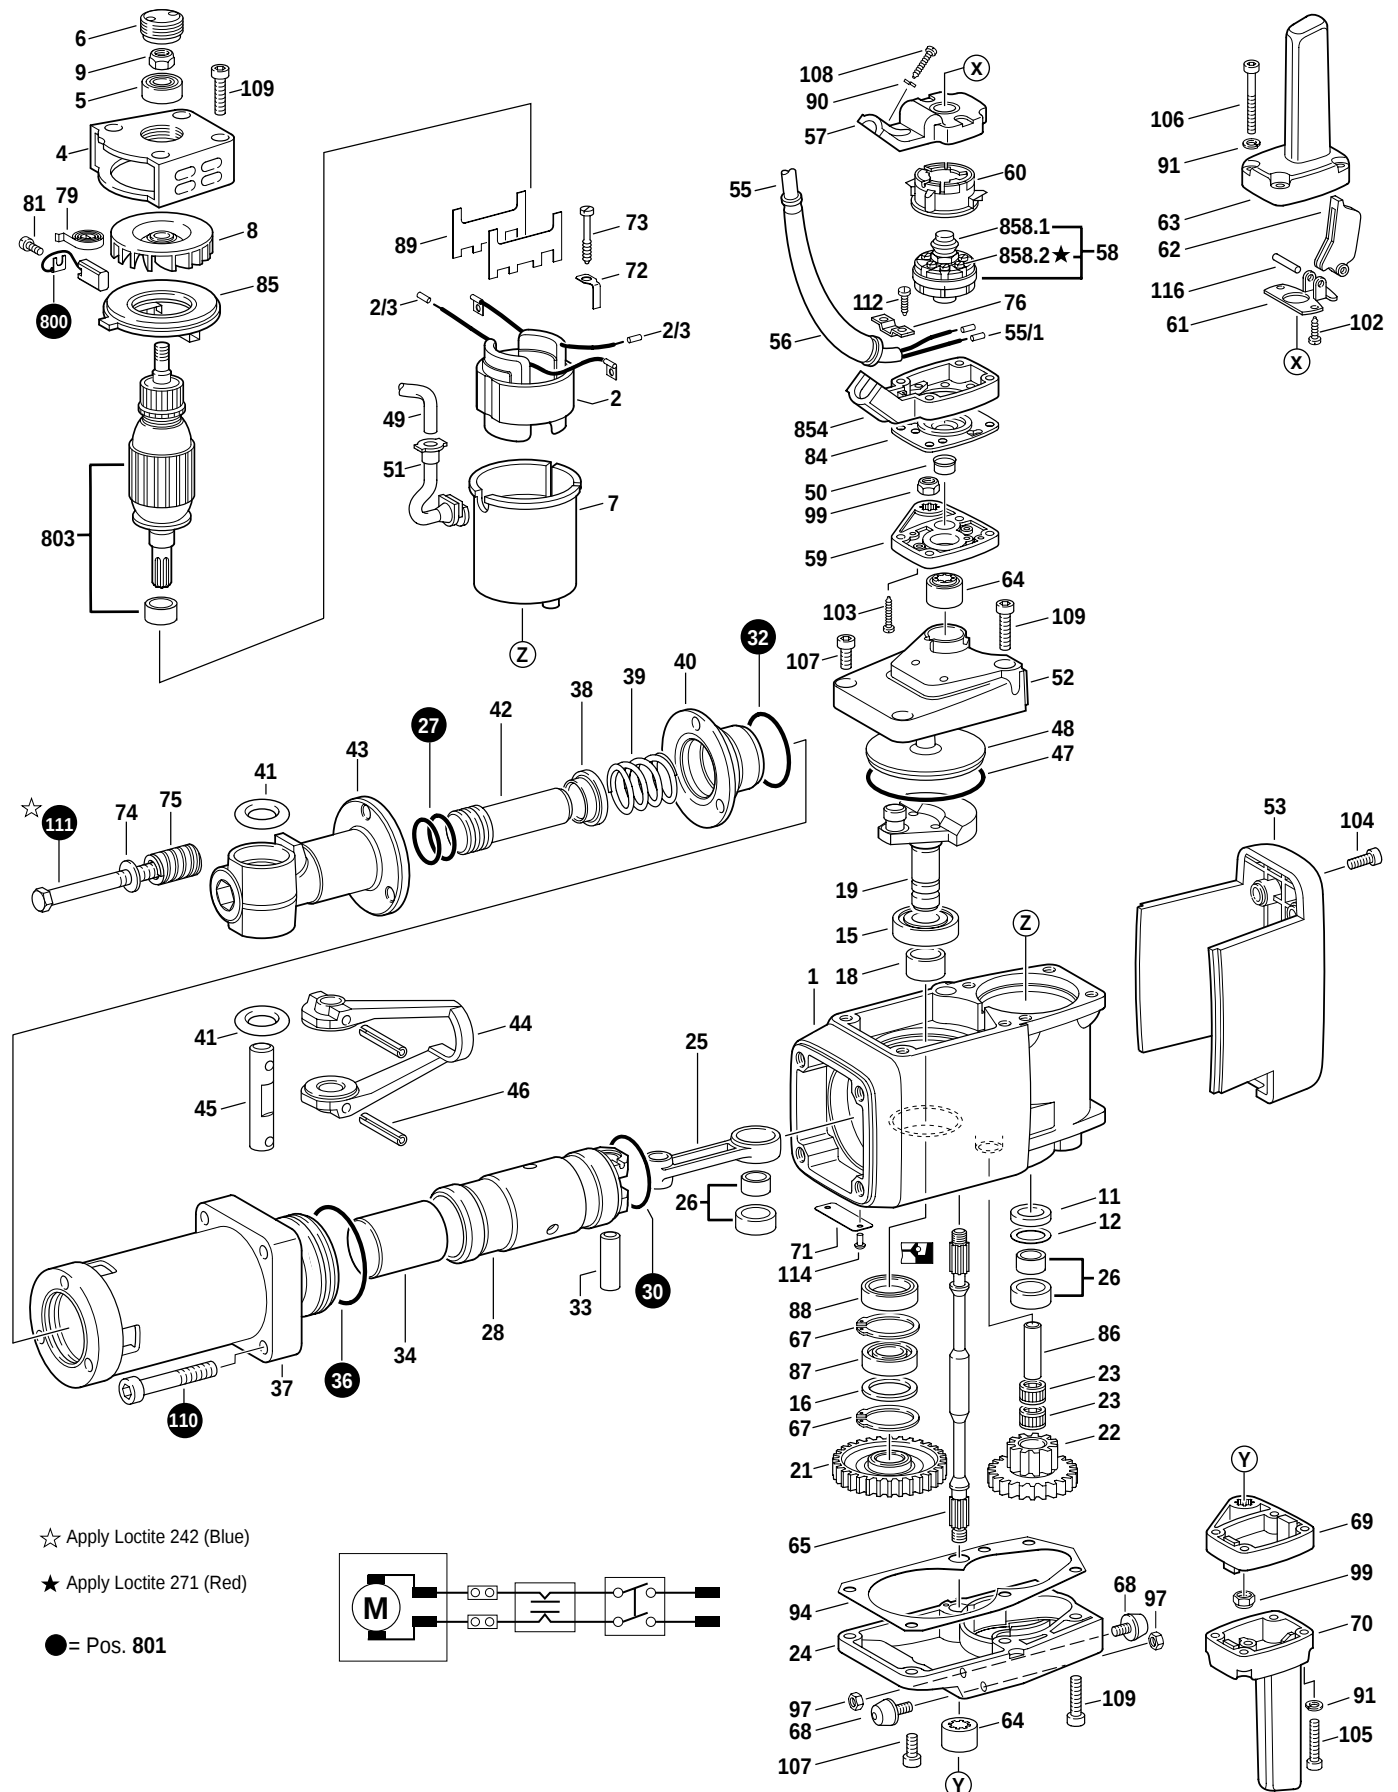

11304 "BRUTE" HAMMER

Pos.	Part Number	Description {Qty.}	F/C	Pos.	Part Number	Description {Qty.}	F/C
1	1 615 106 031	Motor Housing	71	62	1 612 026 011	Switch Lever	63
2	1 614 220 060	Field 115V	22	63	1 615 132 010	Switch Handle	74
2/3	1 900 452 003	Terminal Sleeve {2}	11	64	1 616 334 000	Handle Buffer {2}	9
4	1 615 805 054	Bearing Housing	73	65	1 613 060 005	Shaft	54
5	1 610 900 015	Ball Bearing	60	67	2 916 660 023	Retaining Ring {2}	89
6	1 615 500 214	Retaining Nut	85	68	1 613 465 001	Handle Bumper {2}	9
7	1 615 108 006	Field Housing	9	69	1 612 310 009	Intermediate Plate	38
8	1 616 610 056	Fan	23	70	1 615 132 011	Handle	74
9	1 613 313 000	Nut	89	71	3 611 104 505	Name Plate	9
11	1 610 108 013	Felt Seal	77	72	1 601 331 032	Field Clip {2}	9
12	1 610 102 616	Washer	65	73	1 603 435 008	Screw {2}	89
15	1 610 910 012	Needle Bearing	51	74	2 916 160 009	Spring Washer {3}	74
16	1 610 102 010	Washer	65	75	3 614 640 501	Spring {3}	27
18	1 610 300 034	Sleeve	82	76	3 611 034 500	Cord Clamp	89
19	1 616 110 027	Eccentric Shaft	53	79	1 614 652 001	Brush Spring {2}	27
21	1 616 318 009	Eccentric Gear	34	81	3 603 433 508	Screw & Washer {2}	89
22	1 616 328 036	Intermediate Gear	31	84	1 611 099 003	Mounting Plate	9
23	1 610 913 005	Needle Bearing {2}	56	85	1 614 336 002	Brush Holder	25
24	1 615 500 213	Gear Housing Cover	70	86	1 610 300 033	Pinion Gear	54
25	1 612 001 027	Connecting Rod	57	87	1 900 900 307	Ball Bearing	56
26	1 610 910 035	Needle Bearing {2}	61	88	1 610 283 004	Oil Seal	77
27	1 610 210 033	O-Ring {2}	78	89	1 611 099 004	Insulating plate {2}	9
28	1 618 700 043	Piston	47	90	2 916 681 005	Lock Washer {2}	65
30	2 610 911 045	O-Ring	78	91	2 916 680 007	Lock Washer {8}	65
32	1 900 210 156	O-Ring	78	94	1 611 015 021	Gasket	79
33	3 613 101 500	Wrist Pin	47	97	2 915 011 007	Nut {2}	89
34	1 618 710 039	Striker	44	99	3 613 313 500	Nut {2}	89
36	1 900 210 166	O-Ring	78	102	2 910 211 025	Screw {2}	89
37	1 615 806 029	Guide Tube	43	103	2 910 211 022	Screw {2}	89
38	1 610 220 009	Ring	49	104	2 910 141 201	Screw {4}	89
39	1 614 619 005	Spring	49	105	2 910 141 205	Screw {4}	89
40	1 615 700 017	Flange	38	106	2 910 141 215	Screw {4}	89
41	1 610 210 008	O-Ring {2}	86	107	2 910 141 242	Screw {4}	89
42	1 613 123 003	Impact Bolt	45	* 108	2 910 611 020	Screw {2} (Sheet Metal)	89
43	1 618 597 029	Tool Holder	84	* 108.1	2 910 021 126	Screw {2} (Machined)	89
44	1 618 045 018	Locking Lever	86	109	2 910 141 248	Screw {9}	89
45	1 613 103 004	Locking Bolt	86	110	2 910 141 356	Screw {4}	89
46	2 917 760 187	Roll Pin {2}	86	111	3 613 450 500	Hex Bolt {3}	89
47	1 900 210 172	O-Ring	78	* 112	2 910 611 036	Screw {2} (Sheet Metal)	89
48	1 610 516 007	Eccentric Cover	9	* 112.1	2 910 021 154	Screw {2} (Machined)	89
49	1 610 707 000	Sleeve	9	114	3 603 435 503	Screw {2}	89
50	3 600 421 500	Brass Bushing	82	116	1 613 100 005	Pin	89
51	1 610 703 019	Strain Relief	11	* 800	1 617 014 113	Brush Set	26
52	1 615 500 210	Slide Housing Cover	70	* 800.1	3 607 014 509	Brush Set (For use in high altitude applications)	26
53	1 615 500 094	Top Housing Cover	70	801	1 617 000 050	Service Pack w/grease w/pos. 27, 30, 32, 36, 110, 111, 800	1
55	3 604 460 507	Cord 115V	11	803	2 610 991 399	Armature 115V	AW
55/1	1 900 452 003	Terminal Sleeve {2}	11	854	1 615 130 013	Switch Housing Assembly w/pos. 108, 112	74
56	1 610 703 011	Strain Relief	11	858.1	1 610 591 001	Switch Button	9
57	1 615 500 212	Switch Cover	9	858.2	2 910 091 118	Switch Screw {6}	89
58	1 617 200 015	Switch	15				
59	1 612 310 008	Intermediate Plate	38				
60	1 615 500 211	Switch Flange	9				
61	1 610 147 008	Mounting Plate	9				

Service Notes:

Use 1 981 000 975 Spanner Wrench for the removal / installation of 1 615 500 214 (Pos. 6) Retaining Nut.